# PRODUCT SPEC SHEET Emergency Stop (Mushroom)



## **EKO-M** Mushroom Type EM Stop



### **Key Features:**

- Twist or key reset versions
- Metal Boxed Versions
- 6A @ 230Vac rated

#### **Product Overview:**

The EKO-M mushroom type emergency stop button is a high quality product for increased longevity and reliability.

The Emergency stop button uses a re-settable push to activate, twist-release mushroom style button to enable the customer to press multiple times without having to replace the button.

### **Technical Specifications**

Reset Type:

Switch Rating:

Housing Dimensions:

Twist Reset

6A @ 240VAC SPDT

80 x 73 x 50mm

#### Installation

#### Warning:

Hazardous voltage can cause electrical shock. Disconnect power before proceeding with any work on this equipment.

- 1. Separate switch base and top
- 2. Mount using the base as a template for holes
- 3. Knock out hole at top or bottom of base to allow cable entry
- 4. Feed cable through a cable gland and hole
- 5. Make necessary electrical connections
- 6. Replace switch top

**Note:** Key is captive on key reset models when the switch is in the unlatched position

## **Typical Wiring Connections**

Contact block situated inside base of housing.

